


Installation instructions for “The Detective”

1. Determine the section of track you wish to have detection on.
2. Select one rail and gap it at both ends of the section.
3. Attach a wire to this rail anywhere between the gaps. (Use a track clip or by soldering).
4. Pass this wire through the hole in the black component located on the circuit board and connect the other end to the track power source. See illustration.
5. Connect the two orange wires to 12-16 volts AC or DC. Polarity is not important. The yellow wire is from the common on the relay. The red wire is from the normally-open contact on the relay and the green wire is from the normally-closed contact on the relay.

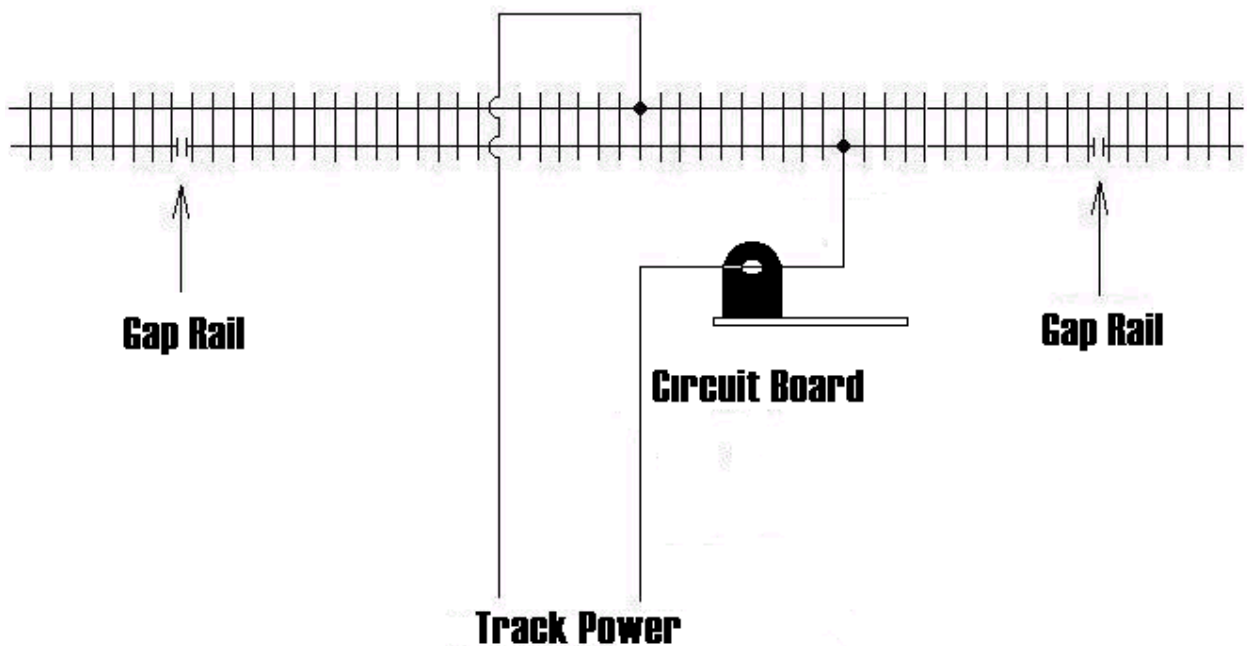

Visit us online at <http://www.eriesignal.com>